



The Parts List of Model
SLP500.1 Engine

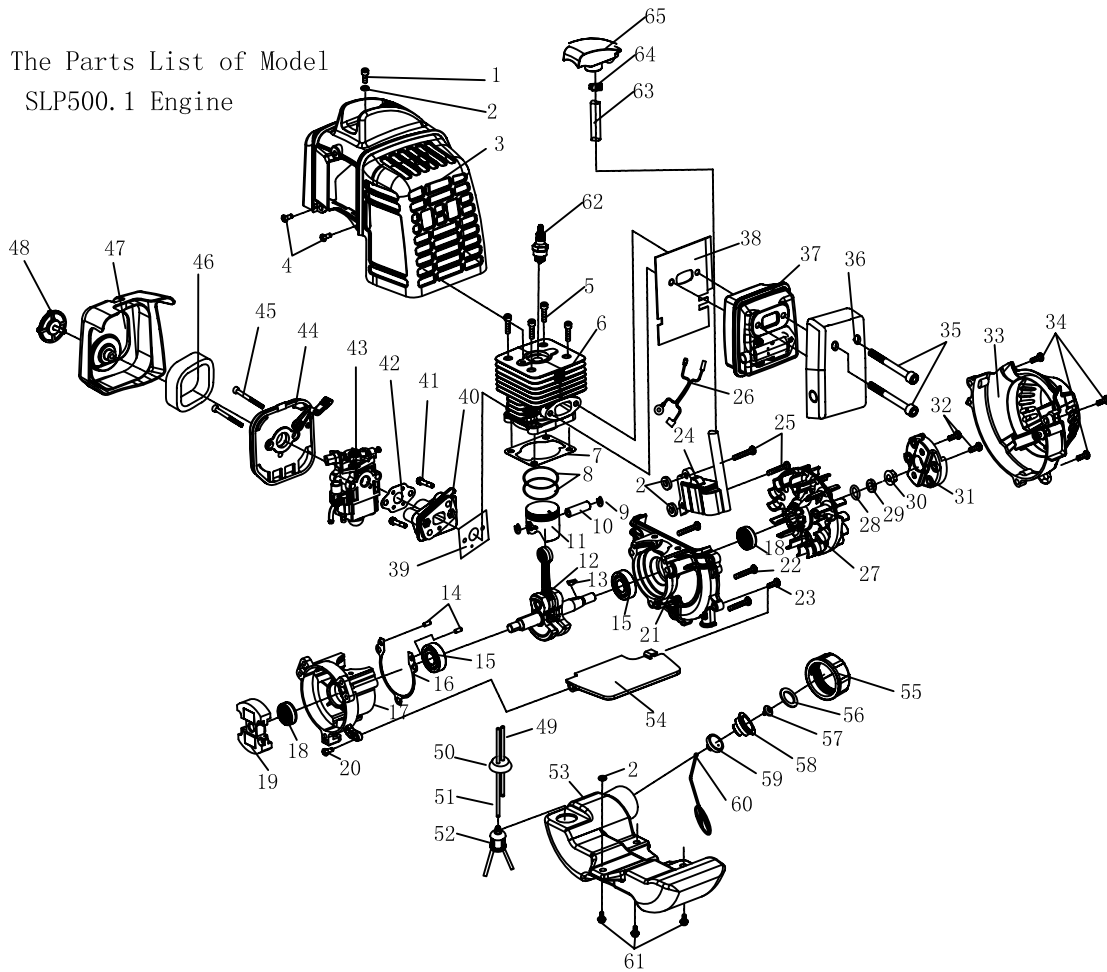

NO.	PART NO.	PART NAME	QTY	NO.	PART NO.	PART NAME	QTY	NO.	PART NO.	PART NAME	QTY
1	GB70+GB93+GB97	SCREW M5*18	1	32	GB70+GB93+GB848	SCREW M6*16	2	63		□6*70 PIPE	1
2	1E33F-4	GASKET	4	33	SLP500.1.5	STARTER COMP.	1	64	HP23.2.1-2	SPRING	1
3	SLP500.1.6	GUIDE COVER	1	34	GB70+GB93+GB97	SCREW 5*18	3	65	HP23.2.1-1	CAP	1
4	GB70.1+GB93+GB97	SCREW M5*12	2	35	GB70+GB97	SCREW 5*55-12.9	2				
5	GB/T70.1	SCREW M5*16	4	36	HP23-5	MUFFLER COVER	1				
6	P23-1	CYLINDER	1	37	1E34F-2E.2	MUFFLER	1				
7	P23-2	GASKET	1	38	SLP500.1-1	MUFFLER GASKET	1				
8	P23.6-2	PISTON RING	2	39	1E34F-2	GASKET	1				
9	1E34F.6-2	PISTON PIN CIRCLIP	2	40	1E34F-E.8	ADMITTING PIPE	1				
10	1E31F.4-2	CARBURETOR	1	41	GB70+GB93+GB97	SCREW 5*30	2				
11	P23.6-1	PISTON	1	42	1E34F-1	GASKET	1				
12	SLP500.1.3.1	CRANK SHAFT COMP.	1	43	SLP500.1.1	CARBURETOR	1				
13	1E40FP-3Z.3-1	KEY	1	44	SLP500.1.8.1	INSIDE COVER	1				
14	GB 119	PIN B4*8	2	45	GB70+GB97	SCREW 5*55	2				
15	GB 276	BEARING 6001-P6	2	46	1E34F.1-1	FILTER NET	1				
16	P23.11-3	CRANK CASE GASKET	1	47	SLP500.1.8-1	OUTSIDE COVER	1				
17	SLP500.1.2-1	FRONT HALF CRANK CASE	1	48	1E34FG.1.1	SCREW	1				
18	1E36F.2	OIL SEAL	2	49	EB415.4.2-4	FUEL PIPE 90mm	1				
19	7DS260-28.1.8	CLUTCH	1	50	1E36FF.8.1-1	FUEL PIPE PLUG	1				
20	GB70.1+GB93+GB97	SCREW M5*12	1	51	1E34F.9.2-2	FUEL PIPE 160mm	1				
21	P23.11-1	REAR HALF CRANK CASE	1	52	1E34FL-3E.13	CLEANER COVER	1				
22	GB70	SCREW M5*20	3	53	SLP500.1.7-1	FUEL TANK	1				
23	GB70.1+GB93+GB97	SCREW M5*12	1	54	HP23-2	GASKET	1				
24	P23.5.1.2	IGNITION COIL COMP.	1	55	1E32FL.6.2-1	FUEL TANK LID	1				
25	GB70.1+GB93+GB97	SCREW M4*20	2	56	CG420.1.3.1-2	GASKET	1				
26	1E36F-2C.6.1	Wire lead assy	1	57	EB-415.4.1.1-1	INLET	1				
27	SLP500.1.4.1-1	FLY WHEEL	1	58	1E32FL.6.2-2	INSIDE LID	1				
28	GB/T 97.1	WASHER 8	1	59	1E32FL.6.2-3	INSIDE LID	1				
29	GB/T 93	WASHER 8	1	60	HB33.2.2.1	CHAIN	1				
30	GB/T6177.1	NUT 8	1	61	GB70.1+GB93+GB97	SCREW M5*16	3				
31	SLP500.1.9	START REEL	1	62	CMR6A	PLUG	1				

The Parts List of Model SLP500 Hedge-Trimmer

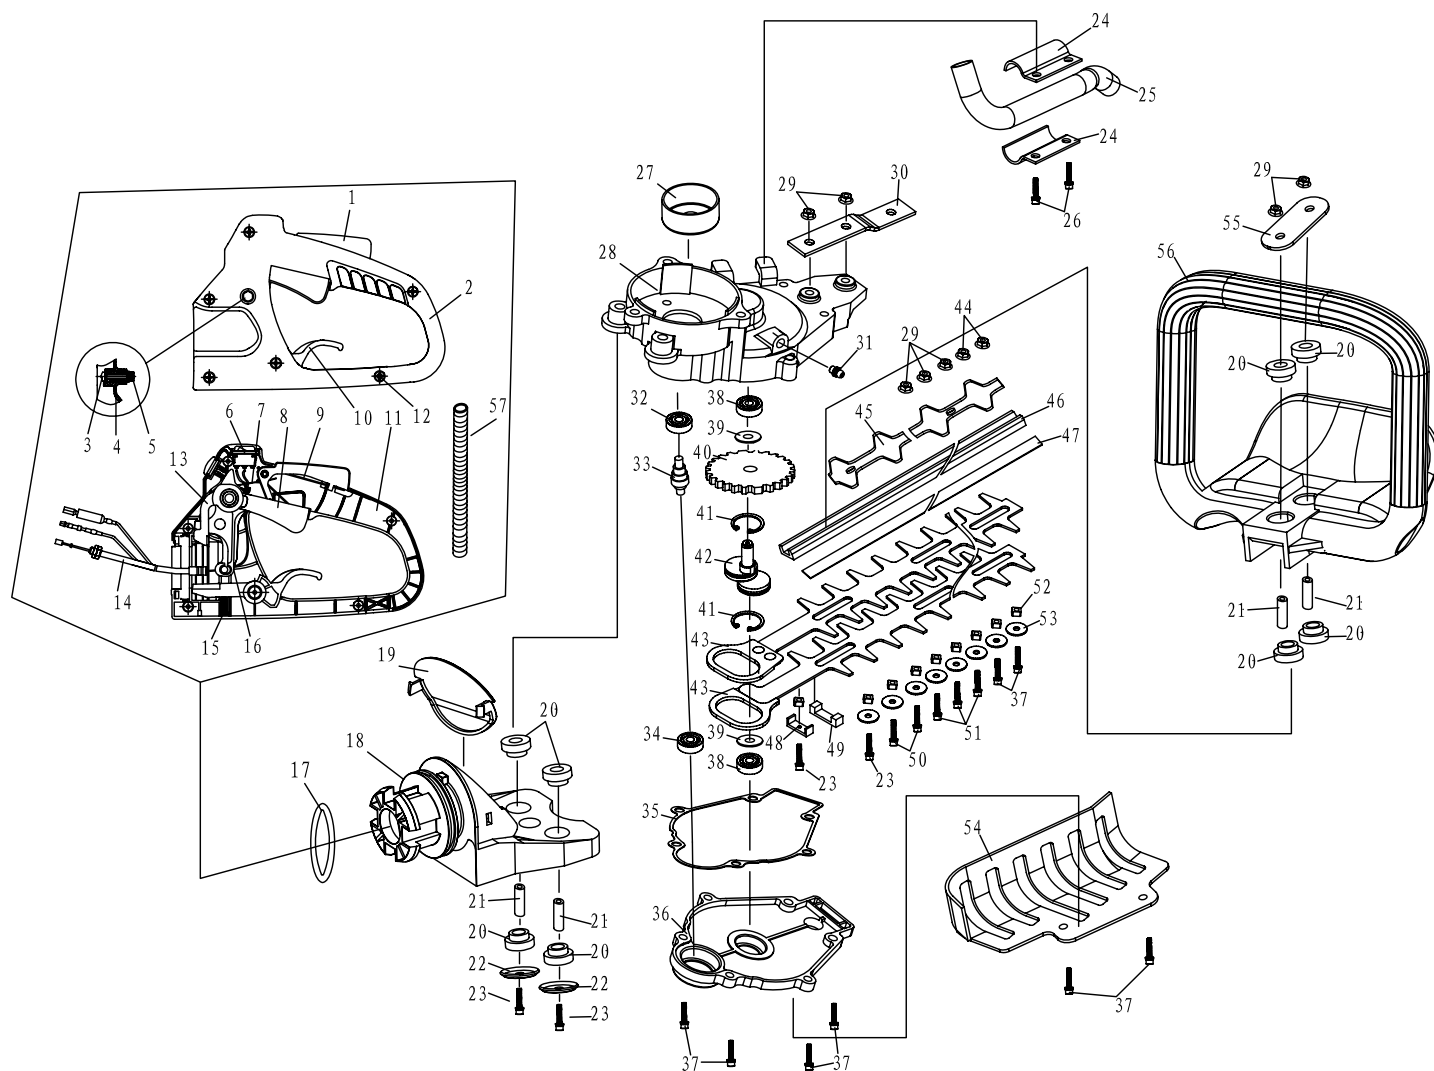

序号	代号	名称	数量	序号	代号	名称	数量	序号	代号	名称	数量
1	SLP600-E. 1-8	Handgrip	1	24	SLP500-5	Washer	2	47	SLP500. 2-11	Cushion	1
2	SLP600-E. 1-1	Handle, left	1	25	SLP500-4	Pipe, exhaust	1	48	SLP500. 2-8	Bracket	1
3	GB/T6560	Screw M4 × 25	1	26	GB/T70. 1	Screw M5 × 10	2	49	SLP500. 2-15	Felt	1
4	SLP600-E. 1-3	Spring	1	27	SLP500. 2-13	Clutch Drum Comp.	1	50	GB/T70. 1+GB/T93+GB/T97. 1	Screw M5 × 50	2
5	SLP600-E. 1-2	Lever, lock	1	28	SLP500. 2-1	Wheel Box	1	51	GB/T70. 1+GB/T93+GB/T97. 1	Screw M5 × 25	3
6	SLP500. 2. 2	Switch	1	29	GB/T6183. 1	Nut M5	7	52	SLP500. 2-14	Spacer	9
7	SLP600-E. 1-7	Spring	1	30	SLP500-3	Gasket	1	53	GJ330. 2-6	Washer 5	8
8	SLP600-E. 1-5	Lever, throttle	1	31	GB/T1152	Fuel Cup M6	1	54	SLP500. 3	Cover	1
9	SLP600-E. 1-9	Spring	1	32	GB/T276	Bearing 6001-2RS/P6	1	55	SLP500-2	Cushion	1
10	SLP600-E. 1-10	Lever, gyral	1	33	SLP500. 2-4A	Gear Shaft	1	56	SLP500-1	Handle Front	1
11	SLP600-E. 1-4	Handle, right	1	34	GB/T276	Bearing 628/P6	1	57	BG328A-2	Tube	0. 2
12	GB/T845	Screw ST4. 2 × 16	6	35	SLP500. 2-3	Gasket	1				
13	SLP600-E. 1-6	Lever	1	36	SLP500. 2-2	Case Cover	1				
14	SLP500. 4-2	Cable comp.	1	37	GB/T70. 1+GB/T93+GB/T97. 1	Screw M5 × 20	8				
15	SLP600-E. 1-11	Spring	1	38	GB/T276	Bearing 626/P6	2				
16	SLP600-E. 1-12	Spring	1	39	SLP500. 2-7	Cushion	2				
17	JB/T7757. 2	Seal 48. 7 × 3. 1	1	40	SLP500. 2-5A	Gear	1				
18	SLP500. 4-1	Frame	1	41	GB/T894. 1	Stop Ring 28	2				
19	SLP600-E. 1-17	Frame Lid	1	42	SLP500. 2-6	Cam Shaft	1				
20	SL750S. 1-9	Gasket	8	43	SLP500. 2. 1	Blade Riveting	2				
21	SL750S. 1-10	Pin	4	44	GB889. 1	Nut M5	2				
22	SL750S. 1-11	Cushion	2	45	SLP500. 2-9	Blade guard	1				
23	GB/T70. 1+GB/T93+GB/T97. 1	Screw M5 × 35	4	46	SLP500. 2-10	Plate, upper	1				