


RPLT 2642 2019 transmission			
Pozice	Obj.číslo	Popis	Počet
2	11402-502810-000	Support -Output	1
2-1	04-32114-253	Screw/GB/T 70.1/M5×10	1
3	09-32182-253	Screw/GB/T 9704/M6×25	1
4	09-32179-253	Screw/GB/T9704/M6×20	4
5	11530-505810-000	Aluminous Pipe	1
6	11428-503710-000	Shaft	1
7	11402-505160-000	Bearing	3
8	12501-500910-000	Connection Shaft	1
9	11442-505610-000	Curved Pipe	1
10	11806-503500-000	Flexible Shaft	1
11	11442-506170-N10	Plastic Support	1
12	07-22470-B14	Lock Washer	1
13	11433-506150-000	Gear Box Assy	1
14	11440-425310-C20	Control Box	1
15	03-01110-353	Screw	7
16	11404-532140-JR0	Pothook	1
17	11404-532150-JR0	Support	1
18	04-15119-253	Screw	1
19	11501-505060-C20	Knob	1
20	04-15176-253	Screw	1
21	17-22060-250	Screw	2
22	11428-501220-000	Spring	2
23	11428-501230-JW0	Conection Set	1
ZC1	11421-424540-000	Handle Assy	1
24	04-15128-253	Screw/GB/T 70.1/M5X30	4
25	11421-424550-JR0	Up Handle	1
26	11421-424560-JR0	Down Handle	1
27	11421-424510-JR0	Coller	1
28	04-15113-253	Screw/GB/T70.1/M5×8	1
29	07-01109-B14	Washer	1
30	09-32122-253	Screw/M5×20	2
31	11433-532210-000	Up Plate	1
32	11401-532820-000	Nut	2
33	11433-533110-JR0	Safety Guard	1
34	09-32117-253	Screw	2
35	11433-532420-K10	Small Blade	1
ZC2	11433-650100-000	bump head	1
36	11433-650250-JR0	Support -Nylon Cutter	1
38	11433-650230-JR0	Rope Shaft-Nylon Cutter	1
39	11433-650210-K20	Spring	1
40	11433-651070-JR0	Cover-Nylon Cutter	1
41	11433-651730-000	Screw	1

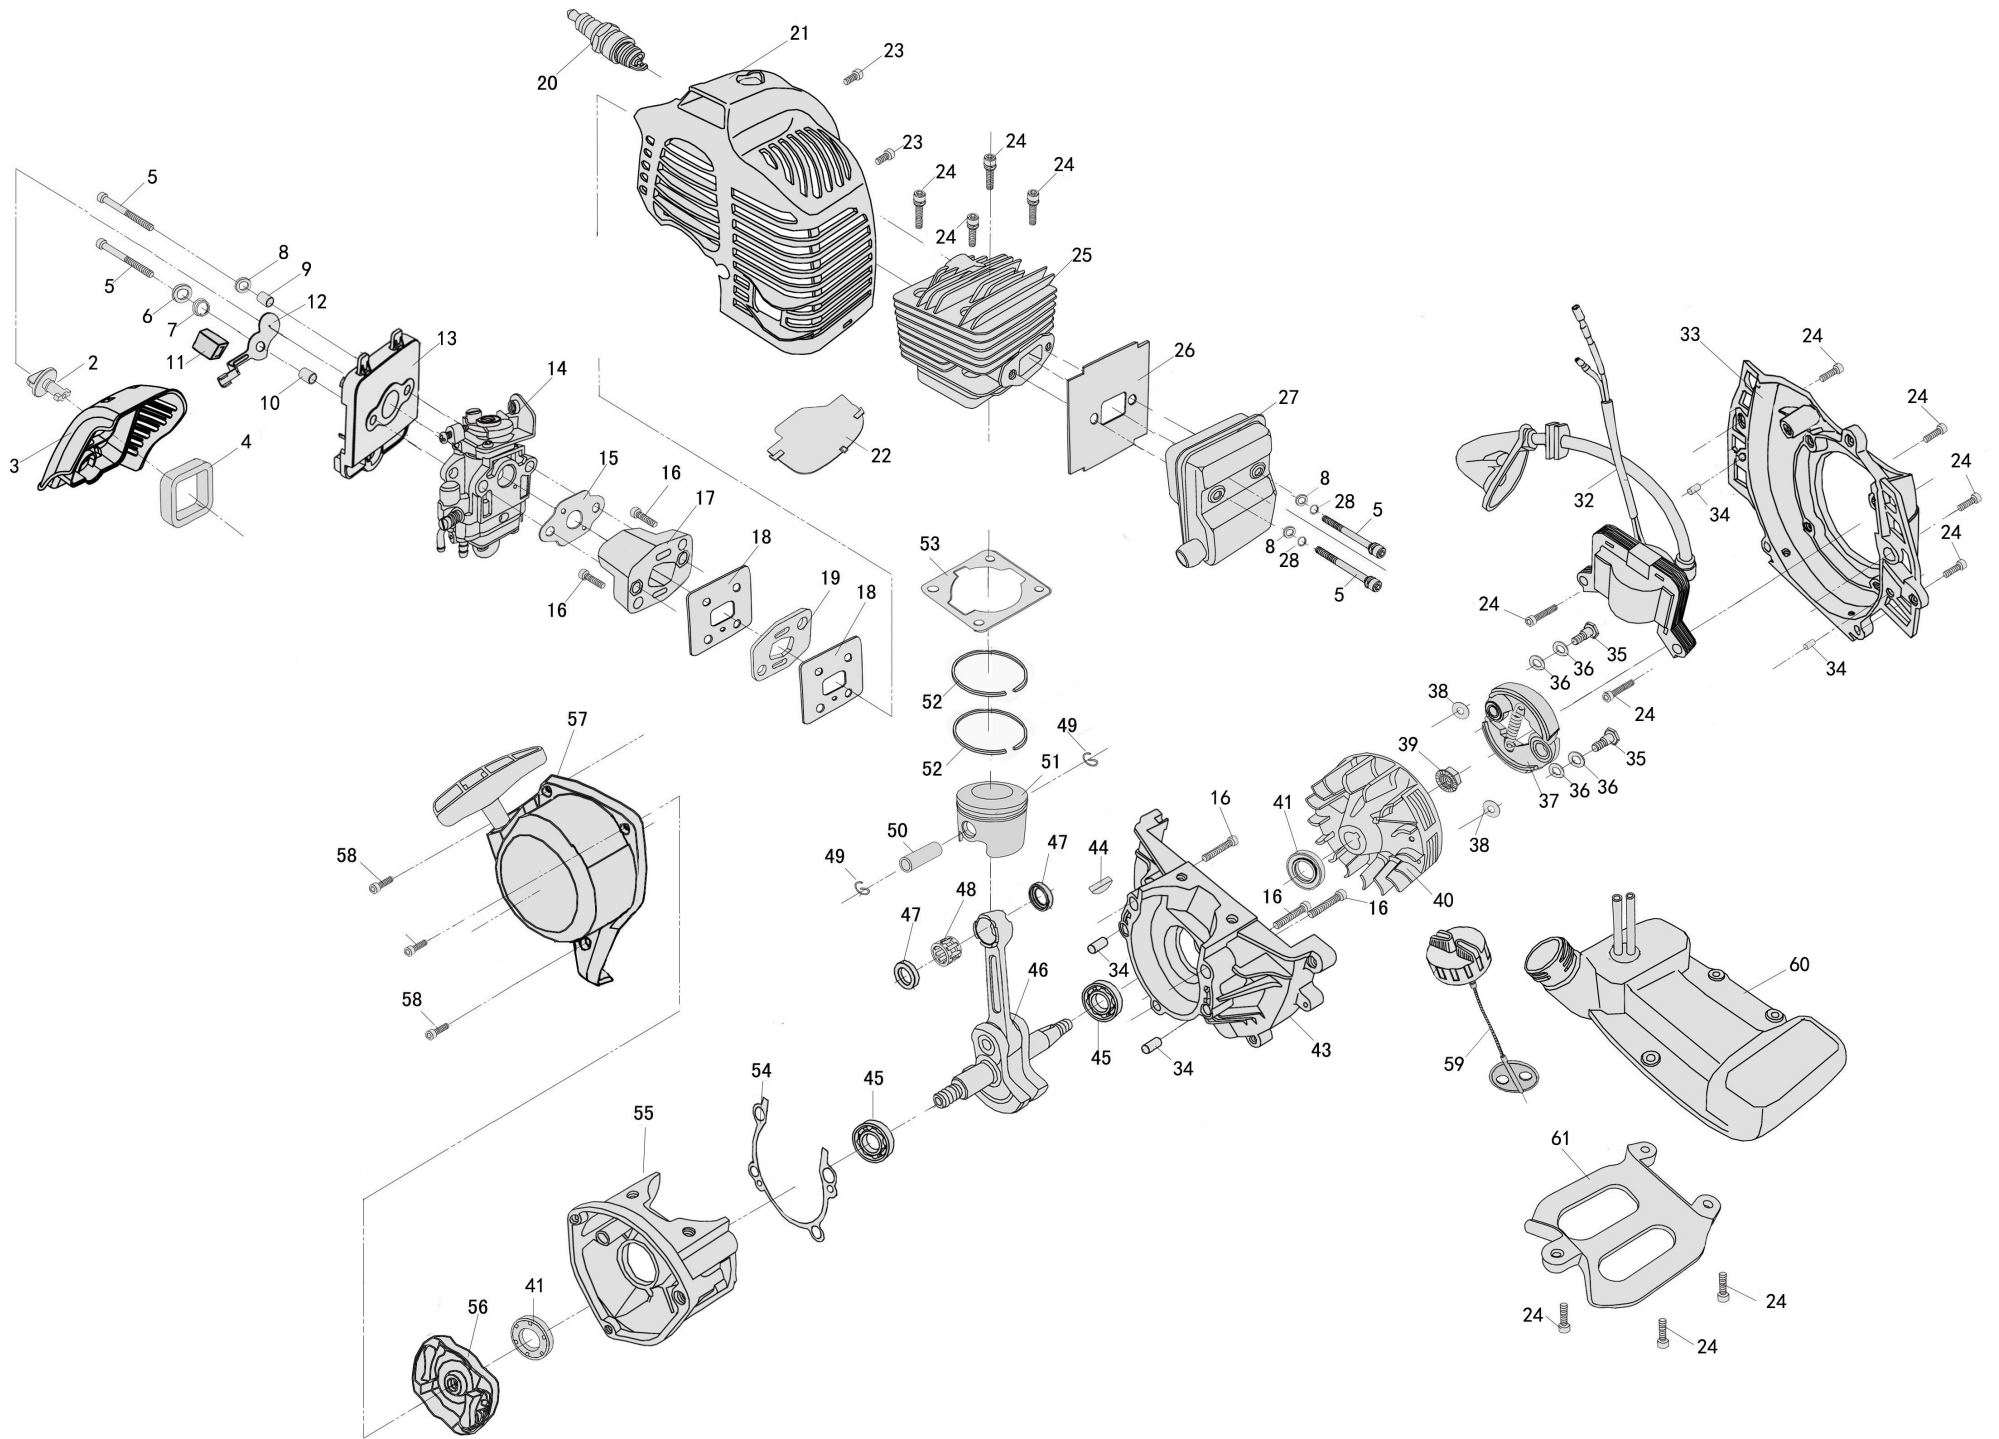

RPLT 2642 2019 engine			
Pozice	Obj.číslo	Popis	Počet
2	11605-164350-JR0	Air Filter Knob	1
3	11404-162120-JR0	Cover-Air Filter	1
4	11404-164150-000	Sponge-Air Filter	1
5	04-15136-253	Screw/GB/T70.1/M5×55	4
6	07-01110-B13	Washer/φ5×14	1
7	11402-164120-K20	Spring Choke	1
8	07-01100-B13	Washer/GB/T97.1/φ5×10×1	3
9	11404-162070-000	Inbuilt-Air Filter(Short)	1
10	11404-162060-000	Inbuilt-Air Filter(Long)	1
11	11402-164470-000	Choke Lever Cover	1
12	11404-164140-000	Choke Knob	1
13	11404-164170-JR0	Air Filter	1
14	11401-250400-000	Carburetor	1
15	11401-250600-000	Carburetor Gasket	1
16	09-32126-253	Screw/M5×2	5
17	11401-164180-JR0	Intake Pipe	1
18	11402-164190-000	Washer-Intake	2
19	11401-164340-JR0	Insulated Plate	1
20	10531-226300-000	Spark Plug	1
21	11402-550110-C20	Cover Cylinder	1
22	11402-550100-C20	Plate	1
23	04-15113-253	Screw/GB/T70.1/M5×8	2
24	09-32122-253	Screw/M5×20	13
25	11401-121110-JZ0	Cylinder	1
26	11401-302000-000	Washer-Muffler	1
27	11401-301500-JW0	Muffler	1
28	07-11109-B13	Spring washer	2
32	11402-226200-000	Ignition	1
33	11402-124010-NP0	Crankcase Side Cover	1
34	16-04113-B10	Pin	4
35	11402-500010-000	Screw Clutch	2
36	07-17210-B10	Spring washer	4
37	11401-500100-000	Clutch Assy	1
38	11402-501920-000	Spring Clutch	2
39	03-01300-354	Nut	1
40	11401-220100-000	Flywheel	1
41	52-01324-900	Seal Oil Gb/T 9877.1/FB12×22×7	2
43	11402-124050-000	Right Crankcase	1
44	28-04002-B10	Key Fly Wheel Gb/T 1099/3X3.7X10	1
45	26-06322-C30	Deep Groove Ball Bearing	2
46	11403-120000-000	Crankshaft Assy	1
47	10201-144100-000	Needle Bearing Ball Clip	2
48	30-11205-C30	Needle Bearing Ball	1
49	11401-140020-000	Ring Snap	2
50	11401-140010-000	Piston Pin	1
51	11401-142100-JZ0	Piston	1
52	11401-143100-000	Piston Ring	2

53	11401-124000-000	Cylinder Gasket	1
54	11402-124040-000	Crankcase Gasket	1
55	11402-124030-000	Left Crankcase	1
56	11402-333890-000	Small Pulley	1
57	11402-333010-000	Start Assy	1
58	09-32119-253	Screw/M5×16	3
59	11260-265700-000	Fuel Cap	1
60	11404-264000-000	Fuel Tank	1
61	11402-265150-000	Support Fuel Tank	1