YD-45-E油锯分解图(二)

The Parts of Model YD-45-E Chain Saw

v. 2.

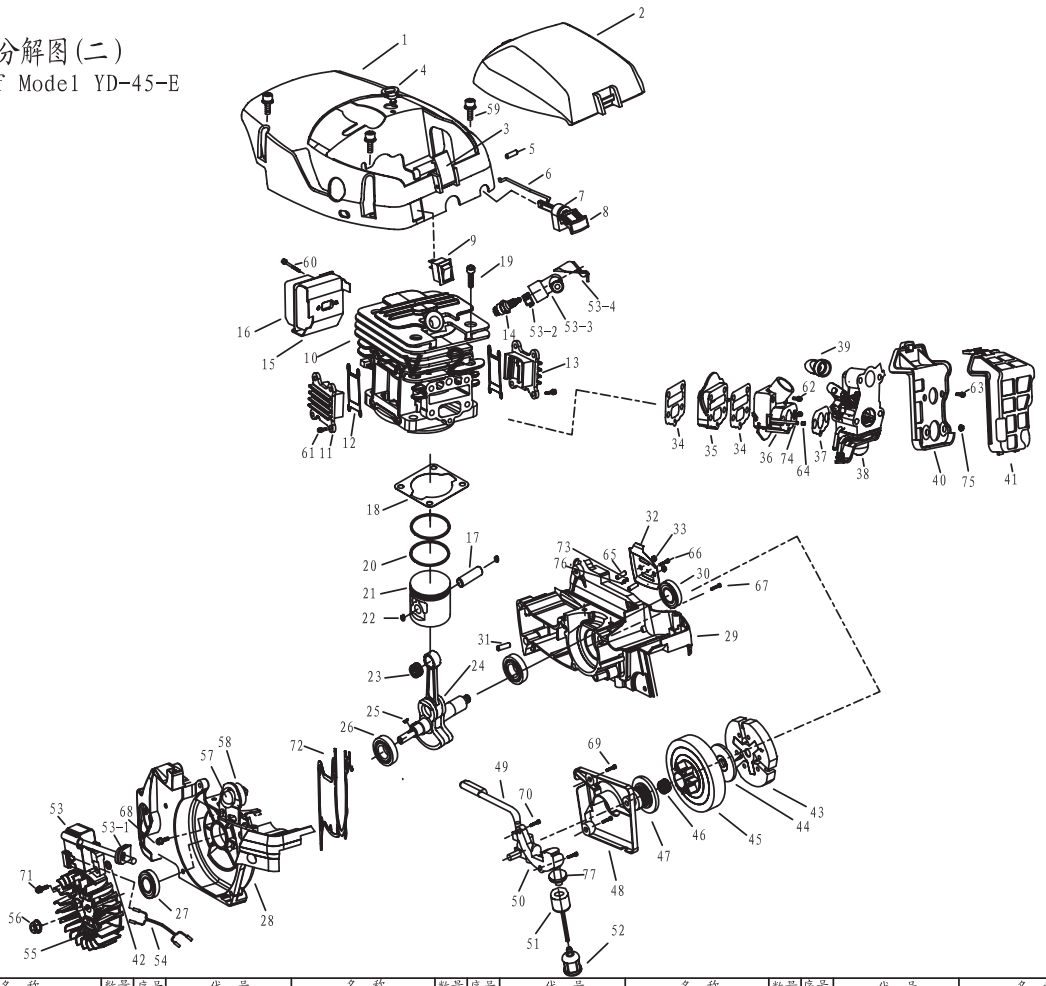

序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.	序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.	序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.	序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.
1	YD-45-E.12-1	缸体护罩 Guide Cover	1	32	YD-45-E.5-6	涨紧盖板 Guidance Cover plate	1	59	GB/70.1+GB93+GB97	内六角螺钉M5*16 Screw M5*16	3				
2	YD-45-E.12-2	上压盖 Gland	1	33	GB/T6177	六角螺母M8（法兰面平面 Nut M8	2	60	GB/70.1	内六角螺钉M6*25-12.9 Screw M6*25-12.9	2				
3	YD-45-E.12-3	卡扣 Start Rope Reel	1	34	YD-45-E.1-8	进气管垫 Gasket	2	61	GB/70.2	螺钉M4*8 Screw M4*8	8				
4	YD-45-E.12-4	冬夏转换胶塞 Summer and winter switching device	1	35	YD-50-E.1-1	进气管垫板 Admitting Pipe Spacer	1	62	GB/70.1+GB93+GB97	螺钉组合 M5×25 Screw M5*25	4				
5	GB/T873	扁圆头半空心铆钉B3*26 oval head semi tubular rivets B3*26	1	36	YD-50-E.1-2A	进气管 Admitting Pipe	1	63	GB/70.1	螺钉 M5*8 Screw M5*8	2				
6	YD-45-E.3-2	阻风门拉杆 Choker Pull rod	1	37	YD-45-E.1-6	化油器垫 Gasket	1	64	YD-50-E.1-8	轴套	2				
7	YD-45-E.3-3	阻风门胶塞 Choker Plug	1	38	YD-45-E.1.8	化油器 Carburetor	1	65	YD-45-E.1-12	锯链螺栓 Thimble	2				
8	YD-45-E.3-1	阻风门手柄 Choker Handler	1	39	YD-45-E.1-11	进气胶管 Admitting Glue Pipe	1	66	GB/T 70.1	内六角螺钉M4*6 Screw M4×6	1				
9	1E40F-5A-PBJ.1	停车开关 Screw M4×20	1	40	YD-50-E.1.3-1	空滤器内罩 Air Filter Inside Cover	1	67	GB/T 70.1	内六角螺钉M5*35 Screw M5×35	6				
10	YD-45-E.1.1-1	缸体 Cylider	1	41	YD-50-E.1.3-2	空滤器外罩 Air Filter Outside Cover	1	68	GB/T 818	螺钉 M4×12 Screw M4×12	1				
11	YD-45-E.1.1-2	左侧盖 Lid	1	42	1E33F-4	隔热垫 Gasket	2	69	GB/T 70.1	内六角螺钉M4*10 Screw M4×10	3				
12	YD-45-E.1.1-4	侧盖密封垫 Start Spring	2	43	YD-45-E.1.7	涨紧块组合 Expander	1	70	GB/T 70.1	内六角螺钉M4*16 Screw M4×16	2				
13	YD-45-E.1.1-3	右侧盖 lid	1	44	YD-45-E.1-14	离合器垫圈 Clutch Washer	1	71	GB/T70.1+GB/T93+GB/T97	螺钉组合件M5*18 Screw M5×18	2				
14	CMR7H	火花塞 Spark Plug	1	45	YD-45-E.1-13	被动盘 Driven Friction Disk	1	72	YD-45-E.1-5	箱体密封垫 Gasket	1				
15	YD-45-E.1-1	消音器垫 Gasket	1	46	YD-45-E.1.11	滚针轴承 Bearing	1	73	YD-45-E-13	通气嘴 Ventilate Mouth	1				
16	YD-45-E.1.18	消音器 Muffler	1	47	YD-45-E.1.6.2.1	机油泵蜗杆组件 Oil Pump Worm Gear	1	74	GB/T 37	T型槽用螺栓M5*50 Bolts For T-Slot M5×50	2				
17	1E40FP-3Z.3-3	活塞销 Piston Pin	1	48	YD-45-E.1-7	机油泵盖板 Oil Pump Cover	1	75	GB/T 6177.1	螺母M5 Nut M5	2				
18	YD-45-E.1-2	缸垫 Gasket	2	49	YD-45-E.1.6-1A	机油泵出油管 Oil Pump Fuel Pipe	1	76	132F.12-4	单向阀 Check valve	1				
19	GB70.1	内六角螺钉M5*20	1	50	YD-45-E.1.6.2	机油泵组合 Oil Pump	1	77	BG415-8	油管夹 Calorie	1				
20	YD-45-E.1.2-1	活塞环 Piston Ring	2	51	YD-45-E.1.6.1-1	机油泵进油管 Oil Pump Fuel Pipe	1								
21	YD-45-E.1.2-2	活塞 Piston	1	52	YD-45-E-12	润滑油过滤器 Cleaner Cover	1								
22	1E40FP-3Z.3-4	活塞销挡环 Ring	2	53	YD-45-E.1.10.1	定子总成 IGNITION COIL COMP.	1								
23	1E40FP-3Z.3	小头滚针轴承 Bearing	1	53-1	YD-45-E.1.10.1-2	胶塞 Plug	1								
24	YD-45-E.1.2.1A	曲轴连杆组 MAGNETO ROTOR COMP.	1	53-2	1E40F-3A.8-2	卡簧 Spring	1								
25	GB/T1099 3*5*13	半圆键 Key	1	53-3	YD-45-E.1.10.1-3	高压帽 Plug Cap									
26	GB/T276	轴承 6202/P5 Bearing 6202/P5	2	53-4	YD-45-E.1.10.1-4	高压帽罩 Cap	1								
27	YD-45-E.1.12	后油封 Oil-Seal	1	54	YD-45-E.1.15	停车线组 Cord COMP.	1								
28	YD-45-E.1.-3	左箱体 Crank Case	1	55	YD-45-E.1.10.2	转子组成 MAGNETO ROTOR COMP.	1								
29	YD-45-E.1-4	右箱体 Crank Case	1	56	GB6177	螺母M8*1 Nut M8*1	1								
30	YD-45-E.1.13	前油封 Oil-Seal	1	57	YD-45-E.15	油杯 Oil Cup	1								
31	YD-45-E.1-15	箱体定位销 Pin	2	58	YD-45-E.10-1	吸油杯座 Oil Cup Stand	1								

YD-45-E油锯分解图(一)
The Parts of Model KS545
Chain Saw

v. 2.

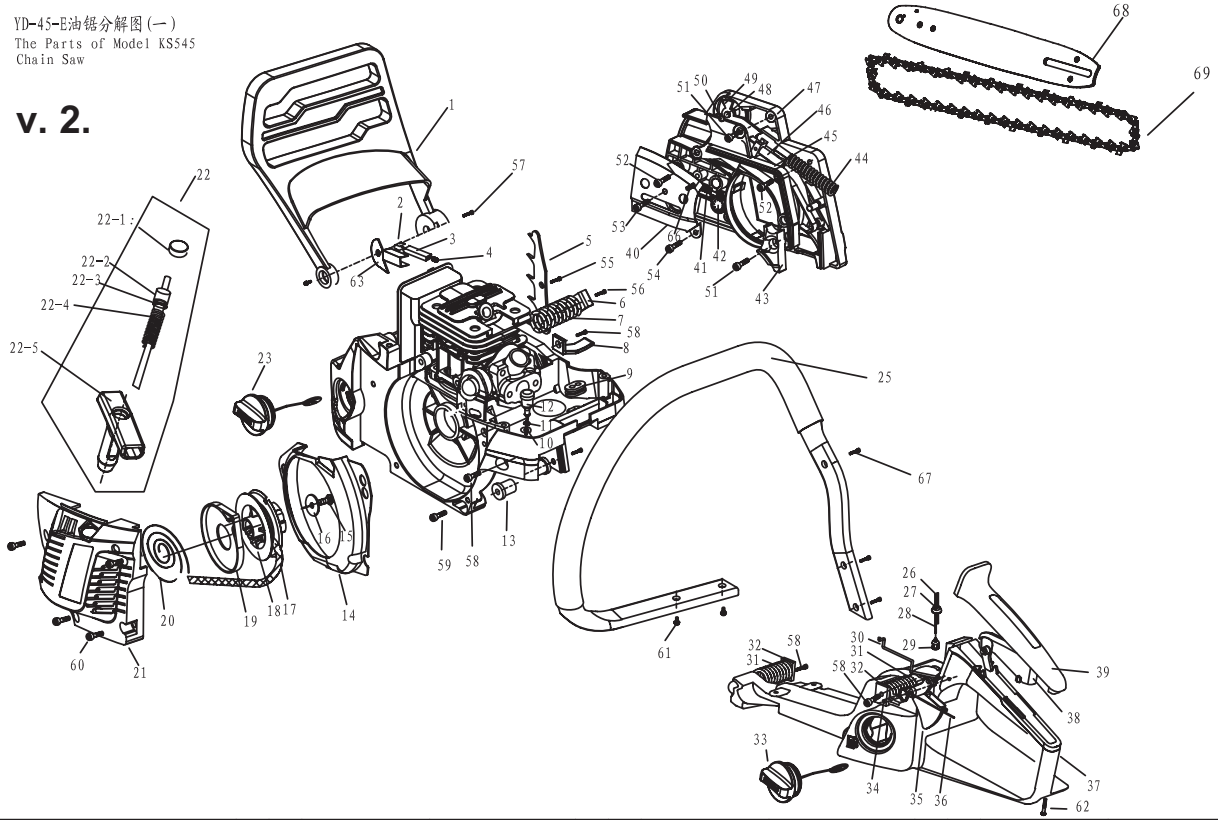

序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.	序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.	序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.	序号 NO.	代 号 Part No.	名 称 Part Name	数量 Qty.
1	YD-45-E-1	护手器 Front Hand Guard	1	32	YD-45-E. 7-1	弹簧固定座 Spring seat	2	63	YD-45-E-. 6-1	垫板 Cushion Board	1				
2	YD-45-E-. 6-2	导向块垫片 Guidance Lump Washer	1	33	YD-45-E. 2. 3	汽油箱盖组合 Fuel Tank Lid	1	66	YD-45-E. 5-9A	涨紧销 Tensioning Pin	1				
3	YD-45-E-. 6-3	导向块 Guidance Lump	1	34	GB119. 2	圆柱销4*28 Pin B4×28	1	67	YD-45-E. 7-6	自攻螺钉 Tapping Screw	3				
4	YD-45-E-. 6-4	复位簧 Recail Spring	1	35	YD-50-E-8	油门操纵手柄 Throttle Control Latch	1	68	YD-45-E. 11-KASEI	导板 Bar	1				
5	YD-45-E-3	插木尺 Bumper Spike	1	36	YD-45-E. 2-3	复位簧 Recail Spring	1	69	. 325 配18寸导板	锯链 chain	1				
6	YD-45-E. 8-1	缸体弹簧固定座 Cylinder Spring Seat	1	37	YD-45-E. 2-5	后手把焊合 Rear Handle	1	22-1	YD-45-E. 9. 1-1	手把堵头 Handle Plug	1				
7	YD-45-E. 8-2	缸体弹簧 Cylinder Spring	1	38	YD-45-E. 2-2	油门锁紧手柄 Throttle Control	1	22-2	YD-45-E. 9. 1-2	手把内套 Handle Endotheca	1				
8	YD-45-E-5	止链销 Chain Catcher	1	39	YD-45-E. 2-4	后手把压盖 Rear Handle Gland	1	22-3	YD-45-E. 9. 1-3	平垫圈 Washer	1				
9	YD-45-E. 1-16	油管胶塞 Plug	1	40	YD-45-E. 5-6A	涨紧盖板 Tensioning Cover plate	1	22-4	YD-45-E. 9. 1-4	压簧 Spring	1				
10	CG420. 1. 3. 2-2	透明塑料管（黄） Fuel Pipe		41	YD-45-E. 5-8	主动涨紧齿轮 Initiative Tensioning Gear	1	22-5	YD-45-E. 9. 1-5	手把 Starter Handle	1				
11	YD-45-E. 2. 2-1	通气管胶塞 Ventilate Plug	1	42	YD-45-E. 5-7	被动涨紧齿轮 Passive Tensioning Gear	1								
12	YD-45-E. 14	进气阀组合 Admitting Valve	1	43	YD-45-E. 5-5	防护块 Protect lump	1								
13	YD-45-E-7	支撑胶套 Support Rubber Tube	2	44	YD-45-E. 5-2	弹簧 Spring	1								
14	YD-45-E-6	导风板 Air Guidance Board	1	45	YD-45-E. 5-4A	弹簧盖板 Spring Cover Plate	1								
15	GB/T818+GB96	螺钉M5*16 Screw M5×16	1	46	YD-45-E. 5. 1	刹车簧片组合 Brake Reed	1								
16	GB96	垫片 Washer	1	47	YD-45-E. 5-1	刹车盖板 Brake Cover Plate	1								
17	φ4尼龙绳	拉绳 Rope (φ4)	1	48	YD-45-E. 5-10	销轴 Bolt	1								
18	YD-45-E. 9-1	滑轮 Start Rope Reel	1	49	YD-45-E. 5-3	凸轮 Cam	1								
19	YD-45-E. 9-3	外罩 Cover	1	50	GB894. 1	挡圈5 Stop Ring 5	1								
20	YD-45-E. 9-2	卷簧 Recoil Spring	1	51	GB70. 1+GB848	螺钉组合件 M5×10 Screw M5×10	2								
21	YD-45-E. 9-4	起动器护罩 Start Cover Ass'y	1	52	GB818	螺钉组合件 M5×8 Screw M5×8	1								
22	YD-45-E. 9. 1	起动器手把组合 Starter Handle	1	53	GB70. 1	螺钉 M4×12 Screw M4×12	1								
23	YD-45-E. 1. 5	机油箱盖组合 Oil Tank Lid	1	54	GB70. 1	螺钉 M4×6 Screw M4×6	1								
24				55	GB/T70. 1	螺钉 M5×20 Screw M5×20	2								
25	YD-45-E. 4	前手把 Front Handle	1	56	GB/T70. 1	螺钉 M5×20 Screw M5×20	1								
26	EB-415. 4. 2. 4	透明塑料管 Fuel Pipe		57	YD-45-E-2	螺栓 Screw	2								
27	1E36F. 8. 1-1	油管胶塞 Fuel Pipe Glue Stopper	1	58	YD-45-E. 7-3	自攻螺钉 Tapping Screw	4								
28	YD-45-E. 2. 1-1	油管 TPU Fuel Pipe	1	59	GB/T 70. 1	内六角螺钉M5×20 Screw M5×20	2								
29	1E48F. 9. 3	燃油过滤器 Fuel Cleaner Cover	1	60	GB70. 1+GB93+GB97	螺钉组合件 M5×20 Screw M5×20	4								
30	YD-50-E. 1-7B	油门推拉杆 Throttle Operating Lever	1	61	YD-45-E. 7-4	自攻螺钉 Tapping Screw	2								
31	YD-45-E. 7-2	弹簧 Spring	2	62	GB/T 848	自攻螺钉ST4. 8×12 Tapping Screw ST4. 8×12	1								